the sign in paragraph (a)(1) of this section is not required.

- (3) Your identification sign must:
- (i) List the name of the lessee or designated operator;
- (ii) In the GOM OCS Region, list the area designation or abbreviation and the block number of the facility location as depicted on OCS Official Protraction Diagrams or leasing maps;
- (iii) In the Pacific OCS Region, list the lease number on which the facility is located; and
- (iv) List the name of the platform, structure, artificial island, or mobile offshore drilling unit.
- (b) You must identify singly completed wells and multiple completions as follows:
- (1) For each singly completed well, list the lease number and well number on the wellhead or on a sign affixed to the wellhead:
- (2) For wells with multiple completions, downhole splitter wells, and multilateral wells, identify each completion in addition to the well name and lease number individually on the well flowline at the wellhead; and
- (3) For subsea wells that flow individually into separate pipelines, affix the required sign on the pipeline or surface flowline dedicated to that subsea well at a convenient location on the receiving platform. For multiple subsea wells that flow into a common pipeline or pipelines, no sign is required.

§§ 250.160-250.167 [Reserved]

SUSPENSIONS

§ 250.168 May operations or production be suspended?

- (a) You may request approval of a suspension, or the Regional Supervisor may direct a suspension (Directed Suspension), for all or any part of a lease or unit area.
- (b) Depending on the nature of the suspended activity, suspensions are labeled either Suspensions of Operations (SOO) or Suspensions of Production (SOP).

§ 250.169 What effect does suspension have on my lease?

(a) A suspension may extend the term of a lease (see \$250.180(b), (d), and (e)). The extension is equal to the

length of time the suspension is in effect, except as provided in paragraph (b) of this section.

- (b) A Directed Suspension does not extend the term of a lease when the Regional Supervisor *directs* a suspension because of:
 - (1) Gross negligence; or
- (2) A willful violation of a provision of the lease or governing statutes and regulations.

\$250.170 How long does a suspension last?

- (a) BSEE may issue suspensions for up to 5 years per suspension. The Regional Supervisor will set the length of the suspension based on the conditions of the individual case involved. BSEE may grant consecutive suspension periods.
- (b) An SOO ends automatically when the suspended operation commences.
- (c) An SOP ends automatically when production begins.
- (d) A Directed Suspension normally ends as specified in the letter directing the suspension.
- (e) BSEE may terminate any suspension when the Regional Supervisor determines the circumstances that justified the suspension no longer exist or that other lease conditions warrant termination. The Regional Supervisor will notify you of the reasons for termination and the effective date.

§ 250.171 How do I request a suspension?

You must submit your request for a suspension to the Regional Supervisor, and BSEE must receive the request before the end of the lease term (*i.e.*, end of primary term, end of the 180-day period following the last leaseholding operation, and end of a current suspension). Your request must include:

- (a) The justification for the suspension including the length of suspension requested;
- (b) A reasonable schedule of work leading to the commencement or restoration of the suspended activity;
- (c) A statement that a well has been drilled on the lease and determined to be producible according to §250.1603 (SOP only), 30 CFR 550.115, or 30 CFR 550.116;